

**VIORE™** TECHNOLOGY & INNOVATION

# OPERATING INSTRUCTIONS

24" 1080p LCD Television with Built-in DVD Player

LCD24VF75



## AIR (TV)/CABLE MODE SELECTION

The Air/CABLE menu option is set to the "CABLE" (Cable Television) mode at the factory. If you want to use an antenna for the built-in TV tuner, this menu option must be set to the "Air" mode. Please refer to "4 . Channel MENU" in page 14 of this manual for the details.

**STOP**

**FOR QUESTIONS OR TECHNICAL SUPPORT**

Please call:

**1-877-777-1428** (USA / PUERTO RICO)

**1-877-777-1429** (CANADA)



Please do not return this TV to the store.

## Contents

Safety and warnings.....	2-3
Introduction.....	4
Installation.....	5-8
Wall Mount.....	9
Remote Control.....	10
Operation.....	11-15
Trouble Shooting.....	16
DVD Operation.....	17-20
DVD Trouble Shooting.....	21

## IMPORTANT SAFETY INSTRUCTION

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lighting storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 15) The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 16) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 17) Attention should be drawn to the environmental aspects of battery disposal.
- 18) The use of apparatus in moderate climate.
- 19) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN!	
<b>CAUTION</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.



The symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

### WARNING:

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

### WARNING:

The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

### WARNING:

 
The excessive sound pressure from earphones and headphones can cause hearing loss.




This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.




This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

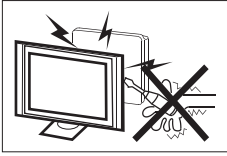

 
High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

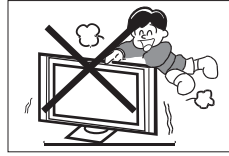

 Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it falls.

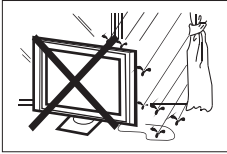

 
To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

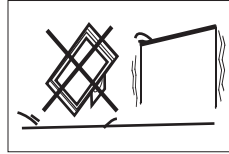


Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it falls.



 
Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

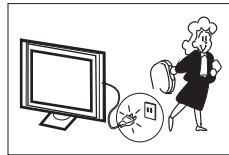

 
When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

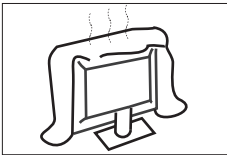

 
Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

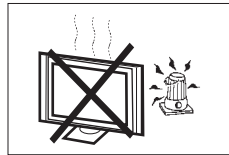

 Avoid exposing the television receiver to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat, e.g. video cassette players and audio amplifiers. Do not place naked flame sources, such as lighted candles on the television.

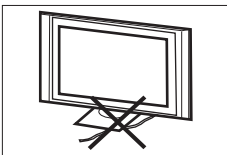

 Do not trap the power supply cord under the television receiver.

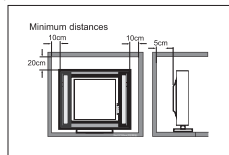

If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.

**Main features**

- 1920 x 1080 native resolution for Full-HD (1080p) performance
- Integrated ATSC TV tuner for HDTV broadcast reception
- Built-in progressive scan DVD player
- High brightness provides a vivid and brilliant picture
- Deeper blacks and brighter whites with high contrast
- Wide Screen aspect ratio (16:9) for a complete home theater experience
- HDMI® input for true digital connection
- VGA port for connection to PC
- Built-in stereo speaker system
- Full-function Remote Control

**Accessories**

Power Cable.....	1
Infrared Remote Control.....	1
User's Manual .....	1
Battery(AAA).....	2
Quick Start Guide .....	1

 
**Specifications**

Viewing Picture Size(diagonal)	24 inch
Resolution:	1920x1080
Aspect Ratio:	16:9
TV System:	ATSC Digital system and NTSC Analog system
Video Signal System:	NTSC/PAL/SECAM
Receiving Channel:	Cable :1-135/ Air: 2-69(ATV&DTV)
Maximum Power Consumption:	60W
Input Power Voltage:	AC 100V-240V 50/60Hz
Audio Output Power(THD ≤ 7%):	2x 3W
High-Definition Multimedia Interface(HDMI) Input	x 2
YCb(Pb)Cr(Pr) Input	x 1
Rear Composite Video Input	x 1
Analog RGB(VGA) Input	x 1
Audio Input	x 2
Headphone Output	x 1
Coaxial Output	x 1
USB Port (MP3,JPEG)	x 1
Horizontal definition(TV line)	Composite Video Input ≥350 Video Input ≥400 YCb(Pb)Cr(Pr) ≥400




HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

## Front panel

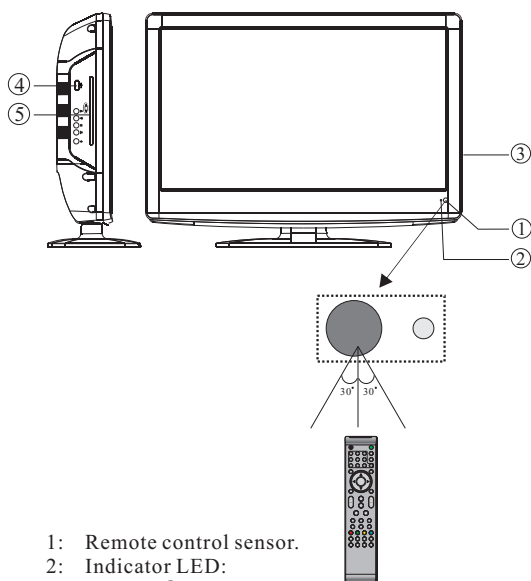


- 1: Remote control sensor.
- 2: Indicator LED:  
GREEN ● POWER ON.  
RED ● STANDBY.
- 3: Key board.
- 4: USB Port.
- 5: DVD Disc loading Slot.

## Side panel

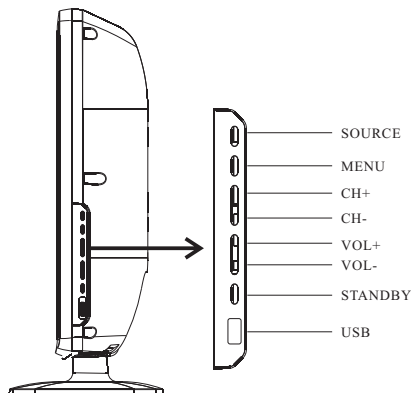 

1. SOURCE  
To display the input source menu.
2. MENU  
To display main MENU.
3. CH+/CH-  
In TV mode, to change the channel up and down.  
In MENU mode, to select the menu items .  
In standby mode, it can turn on the TV.
4. VOL+/VOL-  
To adjust sound level.  
In MENU mode, to select the menu items.
5. STANDBY : Press this button to turn the unit ON from STANDBY mode. Press it again to turn the set back to STANDBY.
6. USB

## REAR AV PASTER

 

1. HDMI1 Input
2. HDMI2 Input
3. Composite Video Input
4. Component Video (YPbPr) Input
5. Audio Input
6. VGA Port (PC Input)

7. Headphone Output
8. PC Audio Input
9. Coaxial
10. Antenna Socket
11. AC Power Socket

Note: 1. Composite video input and component video input share the audio input.  
2. When DVI connector is used on HDMI 1 Input, use "PC Audio" for the audio signal input.  
3. When DVI connector is used on HDMI 2 Input, Use "YPbPr Audio" for the audio signal input.


## PC
 
### STEPS:

Be sure both the TV and computer are set to Power off.

- 1.Connect VGA and audio cable.
- 2.Connect the power cord.
- 3.Power on the TV, switch to VGA mode.
- 4.Power on the VGA.


This sequence is very important.

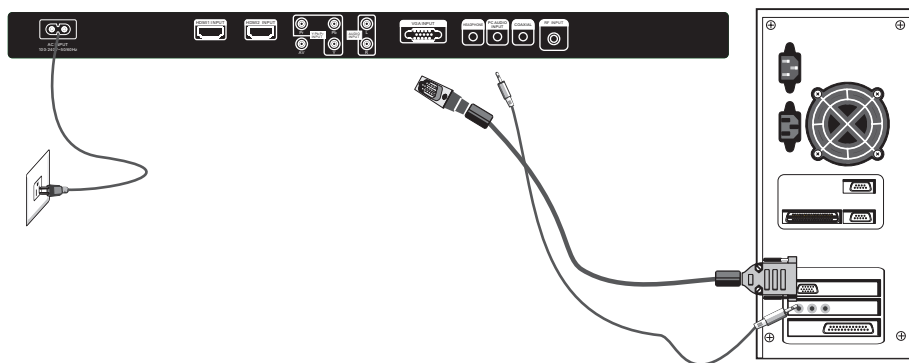

### PRESET MODE

	RESOLUTION	V.Freq.(Hz)	H.Freq.(KHz)
1	720*400	70	31.47
2	640*480	60	31.47
3	640*480	75	37.50
4	800*600	60	37.88
5	800*600	75	46.88
6	1024*768	60	48.36
7	1024*768	70	56.48
8	1024*768	75	60.02
9	1280*1024	60	63.98
10	1280*1024	75	80.00
 
## ANTENNA

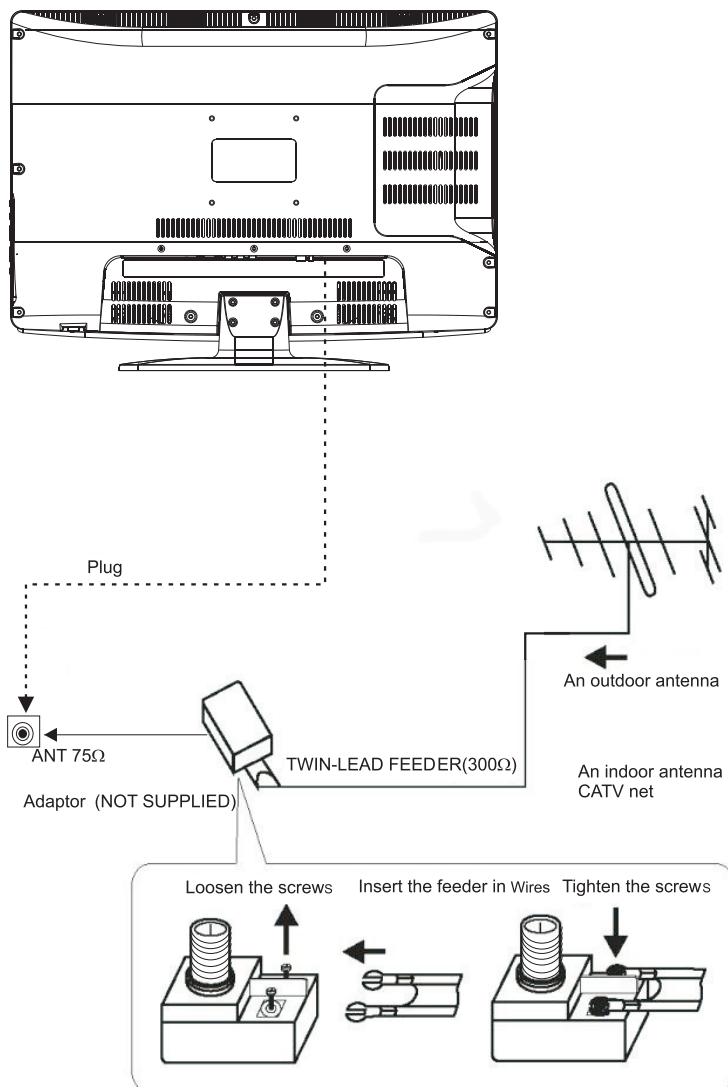


Note:  
Aerial connections: IEC (female).  
Input impedance: 75 Ω unbalanced.

## AV EQUIPMENT

 This TV provides one group of AV ,one group of YPbPr for convenient connection to VCR,DVD or other video equipment. Please refer to the owner's manual of the equipment to be connected as well.

You can use the input terminals on TV set rear as follows.

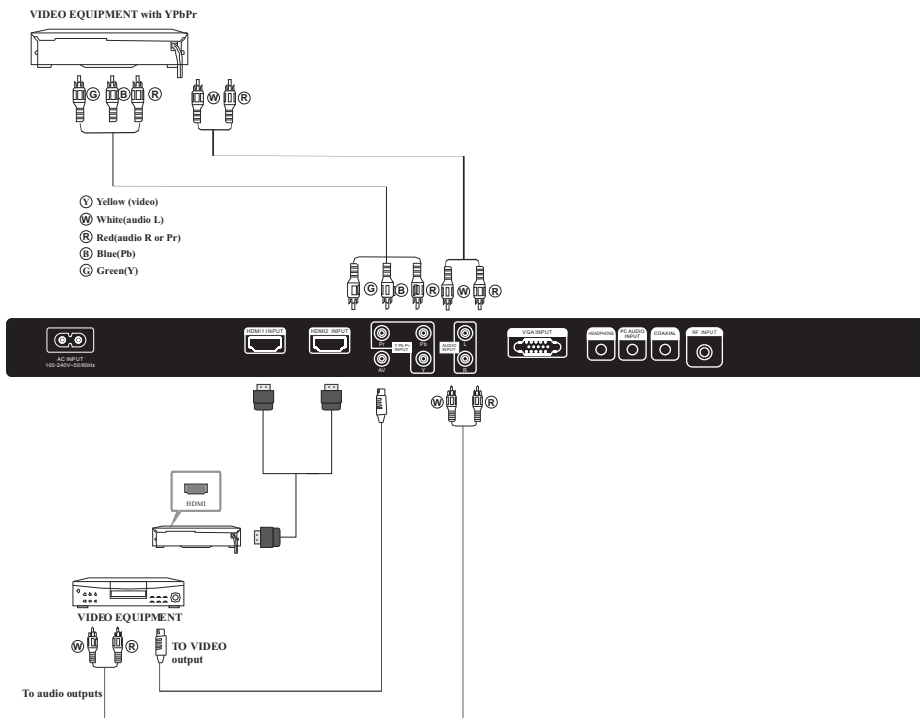


It can be connected to the following appliances: VCR, multi disc player, DVD, camcorder, video game or stereo system, etc.....

YPbPr can support these video formats:480i,576i,480p,576p,720p,1080i.


**Instruction for Wall Mount**

 A wall mount kit (purchased separately) would allow you to mount your VIORE TV on the wall. For detailed information on installing the wall mount, refer to the instructions provided by the wall mount manufacturer. It is strongly recommended to contact a technician for professional assistance for wall mount installation. VIORE is not responsible for any damage to the product or injury to yourself or others resulting from the wall-mounting.

**Dimensions for Mounting Hole Pattern**

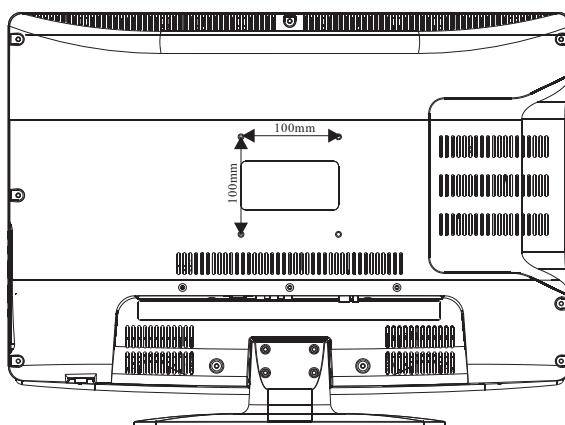


- This VIORE TV is compatible with a 100mm x 100mm mounting hole pattern.
- 4 pcs of type M4 screws are required for installing the wall mount bracket to your VIORE TV. Do not use screws that are longer than 10 mm. Screws that are too long may cause damage to the inside of the TV set.
- Do not fasten the screws too tight for this may damage the TV or cause the TV to fall, resulting in personal injury. VIORE is not liable for these kinds of incidents.
- Do not mount your VIORE TV at more than a 15 degree tilt.
- Always use two people to mount the TV to a wall.
- Do not install your Wall Mount Kit while your TV is turned on. It may result in personal injury due to electric shock.

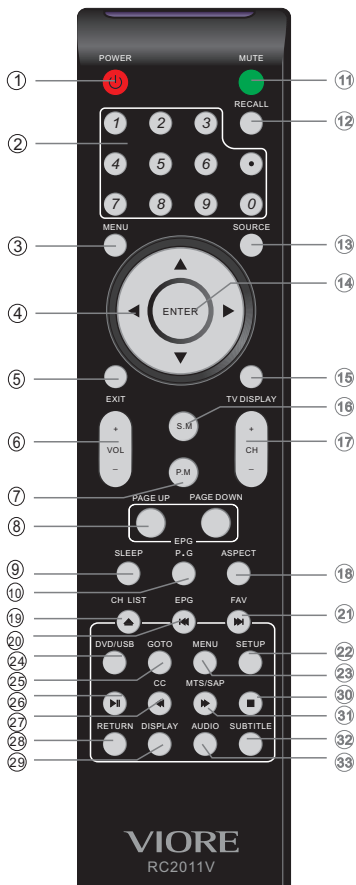 

- 1: **POWER**  
To set the TV standby or on.
- 2: **NUMBER KEY:**  
For direct access to program.
- 3: **MENU**  
To display TV menu or to return to the previous menu.
- 4: **CURSOR**  
To move within the menu.
- 5: **EXIT**  
Used to exit menu.
- 6: **VOL+/-**  
To adjust sound level.
- 7: **P.M**  
To switch picture mode.
- 8: **PAGE DOWN/PAGE UP**  
In EPG mode, use this key to page up/down the EPG information.
- 9: **SLEEP**  
Set time to turn off the TV.
- 10: **P.G**  
Setting the Parental Control level control.
- 11: **MUTE**  
To disable or enable the sound.
- 12: **RECALL**  
To access the previously viewed program.
- 13: **SOURCE**  
To display or exit TV input source menu.
- 14: **ENTER**  
Confirms selection.
- 15: **TV DISPLAY**  
Displays/removes the program Information
- 16: **S.M**  
To switch sound mode.
- 17: **CH+/CH-**  
To access the next or previous Program.
- 18: **ASPECT**  
To change picture aspect.
- 19: **CH LIST:**  
Used to display the channel list.
- 20: **EPG:**  
Display all the information of DTV programs.
- 21: **FAV:**  
Used to access your favourite channels in digital TV mode.
- 27: **CC**  
Enable or disable the CC function (only used for TV and AV source).
- 31: **MTS/SAP**  
Switch the sound stereo, SAP and mono.

**NOTE:**  
For the function of DVD button, please refer to the DVD part at the back of this instruction book.

## Insert Batteries Into the Remote Control

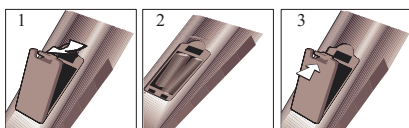 


1. Remove the battery cover.
2. Inserting the 2 AAA 1.5V batteries making sure the polarity (+ or -) of the batteries matches the polarity marks inside the unit.
3. Mount the battery cover.  
Replace with new batteries when the TV set begins to show the following symptoms:  
Operation is unsteady or erratic. Sometimes the TV set does not function with Remote Control Unit.

### Remark:

 - 1) Alkaline Battery Recommended.
- 2) Remove batteries when they are exhausted or if the remote control is not to be used for long time.

## 1. PICTURE MENU

The first item of the MENU is PICTURE MENU. You can adjust picture effect here, such as contrast, brightness, etc. Press ▼▲ to select and press ◀▶ to adjust. Press MENU to exit.

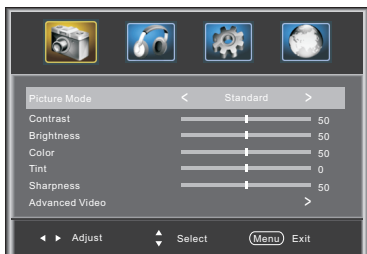


Note:

If you want to adjust contrast, brightness, color, or sharpness, the picture mode must return to “Custom” status.

Advanced Video:

 
Press ▼▲ button to select Advanced Video and press ▶ button. The screen will display as follows:

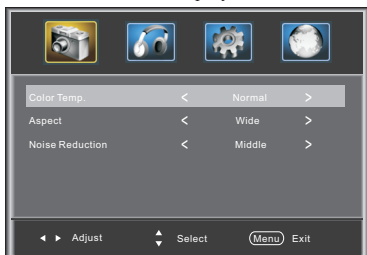

## 2.AUDIO menu

The second item of the MENU is AUDIO MENU. You can adjust sound here.

 Press ▼▲ to select and press ◀▶ to adjust. Press MENU to exit.

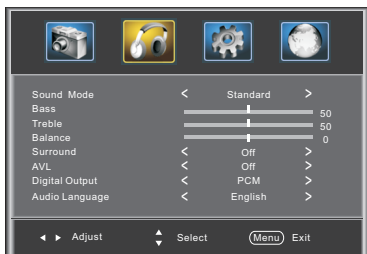

Note:


The item of Audio language is available in ATSC program.

## 3. SETUP MENU

 The third item of the MENU is SETUP MENU.

You can setup system here.

Press ▼▲ to select and press ◀▶ to adjust. Press MENU to exit.

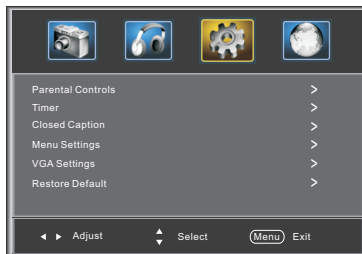


Note:


Restore Default: Reset all the settings to default value.

### 3.1. Parental Controls:

 Press ▼▲ button to select Parental Controls and press ▶ button. The screen will display as follows:

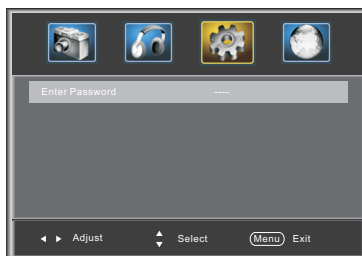


 Input the password so that the screen shows the Parental Control menu. Factory default password is 6666.

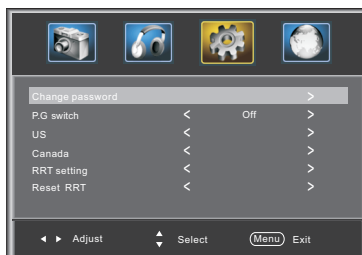

### Change Password:

 Press ► button and the screen will display as follows:

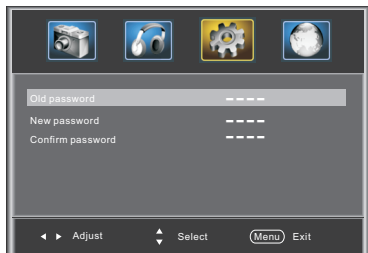


- 1).Old password: Input the old password
- 2).New password: Input the new password
- 3).Confirm password: Input the new password again


### P.G switch:

 When the Parental Control switch is ON, the following options can be adjusted.

US: Press ► button, and the screen will display as follows:

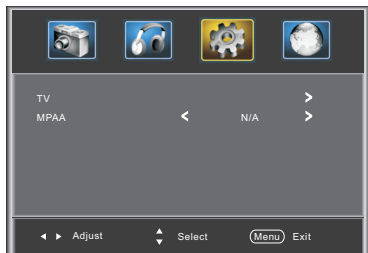

 - 1):TV: Press ► button and the screen will display as follows:

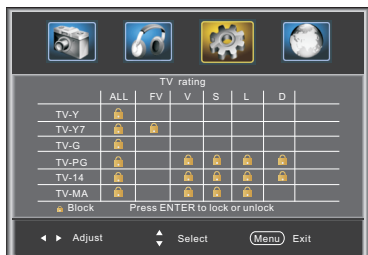


Rating	Content	Content				
		FV (Fantasy violence)	V (Violence)	S (Sexual situation)	L (Adult language)	D (Sexually suggestive dialog)
Suggested age	TV-Y (All children)					
	TV-Y7(Direct to order children)	X				
	TV-G(General audience)					
	TV-PG(Parental Guidance suggested)		X	X	X	X
	TV-14(Parents strongly cautioned)		X	X	X	X
	TV-MA(Mature audience only)		X	X	X	

And use ENTER key to switch lock/ unlock Parental Control feature.

- 2).MPAA:switch the movie-rating control level; N/A, G,PG, PG-13,R,NC-17,X.

Rating	Description	
Age	G	General audiences, All Ages admitted
	PG	Parental Guidance suggested. Some material may not be Suitable for children.
	PG-13	Parents strongly cautioned. Some material may be Inappropriate for children under 13.
	R	Restrict. Under 17 requires accompanying parent or adult guardian(age varies in some jurisdictions)
	NC-17	No one 17 and under admitted.
	X	X is an order rating that is unified with NC-17 but may be encoded in the data of order movies.

 Canada: Press ► button and the screen will display as follows:

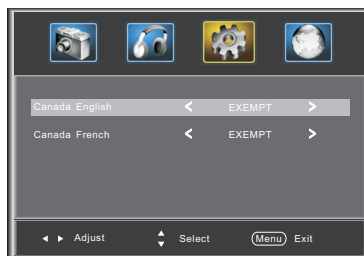

- 1): Canada English: Switch the english rating control level:EXEMPT,C,C8+,G,PG,14+,18+.


Rating	Description
E	Exempt: Includes news, sports, documents and other information programming: talk shows, music videos, and variety programming.
C	Children: Intended for younger children under the age of 8 years. Pays careful attention to themes that could threaten their sense of security and well-being.
C8+	Children over 8 years old: Contains no portrayal of violence as the preferred, acceptable, or only way to resolve conflict; nor encourage children to imitate dangerous acts which they may see on the screen.
G	General: Considered acceptable for all age groups, Appropriate viewing for the entire family, contains very little violence, physical, verbal or emotional.
PG	Parental Guidance: Intended for a general audience, but may not be suitable for younger children (under the age of 8) because it could contain controversial themes or issues.
14+	Over 14 Years: Could contain themes where violence is one of the dominant elements of the storyline But it must be integral to the development of plot or character. Language usage could be profane and nudity, present within the context of theme.
18+	Adults: Intended for viewers 18 years and older and might contain depictions of violence, which while related to the development of plot, character or themes, are intended for adult viewing. Could contain graphic language and portrayals of secretary and nudity.

2).Canada French: Switch the French-rating control level: E, G,8ANS+,13 ANS+,16ANS+,18ANS+.

Rating	Description
E	Exempt programming
G	General :All ages and children, contains minimal direct violence, but may be integrated into the plot in a humorous or unrealistic manner.
8ans+	General but inadvisable for young children :May be viewed by a wide public audience, but could contain scenes disturbing to children under 8 who cannot distinguish between imaginary and real situations. Recommended for viewing with paren.
13ans+	Over 13 years: Could contain scenes of frequent violent scenes and in tense violence.
16ans+	Over 16 years: Could contain frequent violent scenes and violence.
18ans+	Over 18 years: Only for adult viewing. Could contain frequent violent scenes and extreme violence.

RRT setting: This is available only for ATSC.

 
Reset RRT: Press ► button and the screen will be displayed as follows:

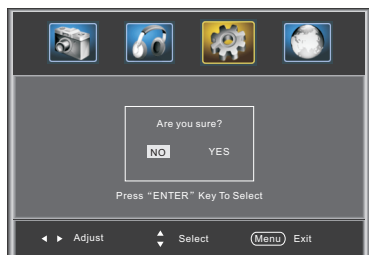

### 3.2 Timer

You can adjust timer here.

 Press ▼▲ to select, and press ◀▶ to adjust. Press MENU to exit.

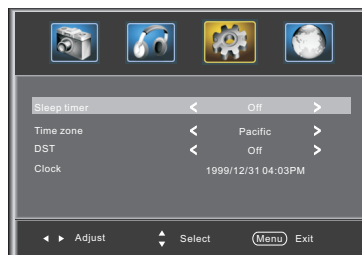


Sleep Timer: you can set the sleep Timer .

Note:

Time zone, DST, and Clock are only for ATSC .

### 3.3 Closed Caption: Switching close caption mode.

 
Press ▼▲ button to select Closed Caption and press ► button. The screen will display as follows:

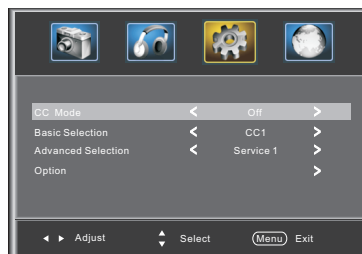

1) Advanced selection: This is available only for ATSC.

2) Option: This is for editing the CC font.

 
Press ► button and the screen will display as follows:

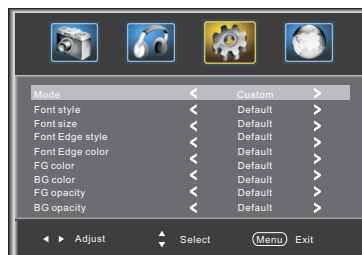

NOTE: This is available only for ATSC.

### 3.4 Menu Settings

 You can adjust Menu Settings here.  
Press ▼▲ to select. Press ◀▶ to adjust. Press MENU to exit.

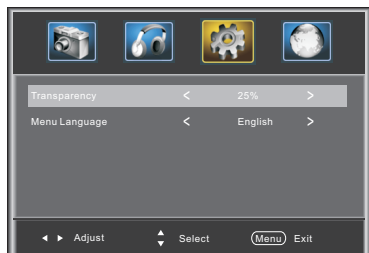

### 3.5 VGA Settings: This is available only in PC Mode.

Press ▼▲ button to select VGA Settings and press ▶ button. The screen will display as follows:



 
- 1).H-Pos:Adjust the horizontal position of the screen.
- 2).V-Pos:Adjust the vertical position of the screen.
- 3).Clock: Fine tune the screen width.
- 4).Phase: Fine tune the phase of the screen.
- 5).Auto: Auto adjust to fit the screen.

### 4. Channel MENU

The fourth item of the MENU is Channel MENU.  
You can adjust digital and analogue TV Channel.  
Press ▼▲ to select and press ◀▶ to adjust.



- 1). Air/Cable: Select Air TV signal or cable TV signal.
- 2). Auto Scan: If you selected Air on Air/Cable selection, scanning all TV channels is required prior to starting watching the TV programs. Press the ▶ button, and you will see the following menu.

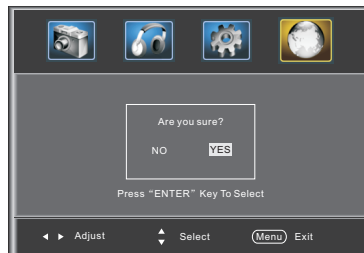

Select "yes" and press the ENTER button.  
You will see the following screen that shows progress of Auto Scan.



- 3). Favorite: Press ◀▶ button to choose/delete the favorite channel .
- 4). Show/Hide: Press ◀▶ button to display or hide the current channel.
- 5). Channel NO.: Display the current channel number.
- 6). Channel label: Press ▲▼ button to edit the current channel name.
- 7). DTV signal: Display DTV signal intension. It can't be selected or adjusted.

## 5. Multimedia MENU

If you select storage source. You can use Multimedia Menu to play the JPEG picture and Mp3 music.

### 1. Select Photo item

If select Photo item, the JPEG menu display on screen below:



Use **◆** to select the jpg files or folders, and use “OK” key to play. Use EXIT key to stop playing or go to upper menu.













 



### 2. Select Music item

By selecting Music, the following music menu will be displayed.




Use **◆** to select the mp3 files or folders, and use “OK” key to play. Use EXIT key to go to upper menu.

- : play
- : pause
- : stop
- : fast back
- : previous
- : next
- : fast forward
- : repeat all
- : random play

Trouble phenomenon Symptom		Inspection Check
Picture	Audio	
 Snow	 Noise	antenna position, direction or connection
 Ghost	 Normal audio	antenna position, direction or connection
 Interference	 Noise	electronic equipment, car/ motorcycle, fluorescent light
 Normal Picture	 Mute	Volume(check if mute is activated or if the audio system connections are not correct)
 No picture	 Mute	Power cord is not inserted Power switch is not opened Contrast and brightness/volume setup Press standby key on the remote control for inspecting
 No colour	 Normal audio	Colour control
 Picture breaking up	 Normal audio or weak	retune channel
 No colour	 Noise	TVsystem

The LCD TV panel is built with very high precision technology giving you fine picture details in vibrant color. Occasionally, a few non-active pixels may appear on the screen as a fixed point of red, green, blue, black or white. Please note this does not affect the performance of the product.

## DVD SIDE PANEL

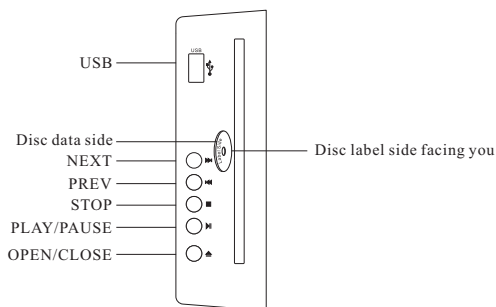 

## USB

In DVD mode when no disc is playing, insert a USB drive (or an MP3 player with USB interface) into the USB socket. Press the DVD/USB button on the Remote Control unit, and use the ▼/▲ keys to select USB mode for playing MP3 or JPEG files.

Please make sure to stop playing disc before inserting a USB. You can play USB by pressing keys on the remote control with the following sequence.

1. DVD/USB key
2. UP/DOWN key to select DISC/USB
3. ENTER key to confirm

**Caution:**

When using USB function, please do not insert in the wrong direction, or else it will damage the unit.



Caution

 
This DVD Player has a Class 1 laser which may be harmful to your eyes. Do not attempt to disassemble the cabinet or make any adjustments. Refer all servicing to a qualified professional.

## MENU OPERATION

Press the **SETUP** button on the remote control, the **SETUP MENU** will be displayed. After accessing the setup menu, press the direction buttons for up and down movement to select an item desired, and press **RIGHT** direction button to select the **SUBMENU** item. Then press the **ENTER/OK** button to confirm. Press **LEFT** direction button return to the menu of upper level. To exit the setup, press the **SETUP** button again. In the **SETUP MENU**, you may choose any of the following options as you like.

## LANGUAGE SETUP

Select **Language** in the setup menu, and display the **Language** submenu:

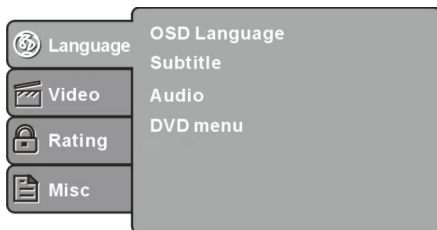

### OSD Language

Use this item to select the language of the setup menu and screen display.

### Subtitle

This option provides the preset subtitle language.

### Audio

 
Select the built-in disc dubbing language options.

### DVD Menu

This option provides the film's menu language options.

## VIDEO SETUP

Select **Video** in the setup menu, and display the **Video** submenu:

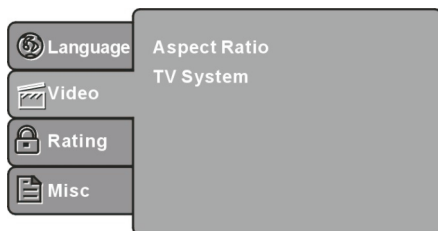

## SYSTEM SETUP

### Aspect Ratio

Select the aspect ratio.

#### Notes:

The image display ratio is related to the recorded disc format. Some disc can not display images in the aspect ratio you choose. If you play a disc recorded in 4:3 format on a wide screen TV, black bars will appear on the left and right side of the screen. You must adjust the screen setting depending on the type of the television you have.

 
### TV System

Select the different TV system.

**Note:** The DVD player setting should be matched to your TV set. For more information of output format, refer to the instructions or your TV set.

## RATING SETUP

Select **Rating** in the setup menu, and display the **Rating** submenu:

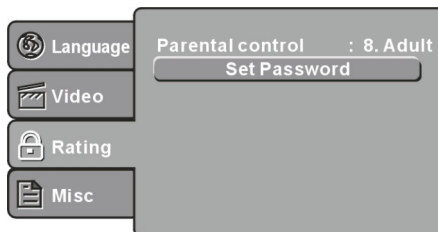

### Parental Control

Set the parental control feature of the player

**Note:** Password is needed before setting Parental Control.

 
### Set Password

Input four digits (password), then press **ENTER /Ok** to confirm.

**Note:** If you forget your password, please use the universal password 6666 to unlock.

## MISC SETUP

Select **MISC** in the setup menu, and display the submenu:

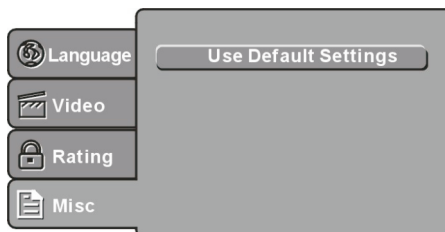

### Use Default Settings

Reset setup data to factory default value.

## MP3/WMA/JPEG PLAYBACK



The MP3/WMA disc has such a directory structure as shown picture above.

Press **Direction key** to choose the root directory and then press **ENTER** button to enter into the sub directory. Press **Direction key** to choose the desired track and then press **ENTER** or **PLAY** to enjoy the music or movie. If you want to return to the upper menu, press **Direction key** to choose the icon and press **ENTER** button.

**Filter:** Allows selecting the categories of files displayed in the browser list.

**Repeat:** To switch different repeat playing mode

**Mode:** Select different playing mode as follows:

**Normal:** Shuffle mode is cancelled.

**Shuffle:** Shuffle mode enabled. When playback reaches the end of the current chapter/track, playback jumps to a random chapter/track. As the end of each chapter/track is reached, another random chapter/track will be played until all tracks/chapters have been played or the Shuffle mode is cancelled by toggling to a different **Mode** Option.

**Edit Mode:**

Program CD or MP3 Disc :

1. CD/MP3 Playback manual will appear on screen once you insert the discs in the slot. Disc will start playback automatically.

2. IN STOP MODE : press right button, then press UP/Down button to highlight the Edit Mode and press **ENTER** to confirm.

3. Press left button to move cursor back to TRACK and select desired tracks which you prefer to program, then press **ENTER** to confirm.


4. Press right button to move cursor to "ADD PROGRAM", then press **ENTER** button to confirm.

5. Highlight "PROGRAM VIEW" and press "ENTER", the programmed tracks will appear and press **PLAY** button on the remote control to start Program Play.

6. If you wish to clear those you have programmed, press **STOP** button twice, then move Left cursor to highlight the programmed tracks, use UP/DOWN button to select the tracks you wish to clear, then press **ENTER** button, press **RIGHT** button to highlight the "CLEAR PROGRAM" and press **ENTER** button to clear all. (If you wish to return to Disc Menu, use Right arrow to highlight "BROWSER VIEW" and press "ENTER" button.

## PICTURE CD PLAYBACK

The PICTURE CD disc has such a directory structure as shown in the following picture.

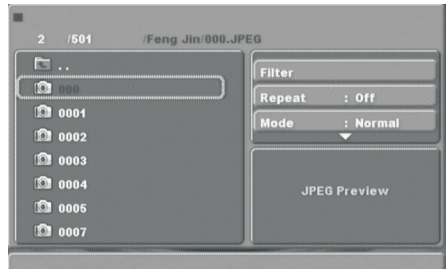 

Press **Direction key** to choose the root directory and then press **ENTER** button to enter into the sub directory. Press **Direction key** to choose the desired picture and then press **ENTER** or **PLAY** to enjoy the picture. If you want to return to the upper menu, press **Direction key** to choose the icon and press **ENTER** button.

**Image rotation**

In picture play state, press **Direction key** to rotate the picture.

**USB**

If the player has a USB slot and it's NOT in "disc playing" status, you can insert a USB device or a Mp3 Player with USB Interface to play the MP3 music or and JPEG files. All the function is the same to play a disc.

When the disc is playing, please stop playing first and insert a USB, enjoying USB by press **DVD/USB** key on the remote controller, and then press **▼/▲** key to select DISC/USB, and press **ENTER** to confirm. Not all USB device can be supported by this system.

**Note:** When using USB function, please do not insert in the wrong direction, or else it will damage the unit.

**Function Buttons****OPEN/CLOSE**

To open the disc tray, press OPEN/CLOSE; To close the disc tray, press OPEN/CLOSE again.

**SUBTITLE**

Press the button to choose different captions(*Requires support from disc*)

**GOTO**

For DVD discs, press the button to choose the desired title and chapter and search the desired title time and chapter time. For Super VCD, VCD, CD discs, press this button to search the desired disc time and track time and choose the desired track.

Note: During VCD playback, the PBC mode must be set to OFF.

**0-9 keys**

These keys are used to input the time, as well as title, chapter and track numbers. When a numeric item is displayed on the screen, press the 0-9 keys to select the desired entry, and press ENTER/OK to confirm.

When a VCD is playing (with PBC off), press the 0-9 keys to select a track directly.

**MENU**

During DVD playback, press MENU to display the disc menu of the current title.

During VCD/SVCD playback, press MENU to control PBC ON/OFF.

**SETUP**

Press the button to enter the system setting menu. Press the button again to exit the menu.

**RETURN**

When DVD/SVCD/VCD displaying, press RETURN button to the menu (PBC ON only).

**DISPLAY**

Press the button to show the information of the current playing disc.

**ENTER**

Press the button to confirm your choice on screen.

**REV:**

During DVD, CD Mp3 or VCD playback, press REV to scan in reverse. The player will review the disc at different times speed. Press PLAY/PAUSE to resume normal playback.

**FWD**

During DVD, CD, MP3, or VCD playback, press FWD to scan forward. The player will cue the disc at different speed. Press PLAY/PAUSE to resume normal playback.

**PREV**

During DVD, CD, MP3, or VCD playback, press PREV to play the previous chapter, title or track.

**NEXT**

During DVD, CD, MP3, or VCD playback, press NEXT to play the next chapter, title or track.

**STOP**

Press the button once and the player will be in memory stop state. Continuously press this button twice and the player will be in complete stop state.

**Play/Pause**

In pause state or stop state, press the button, the player will be in playing state. In play state, press the button the player will be in pause state.

If you have any questions, please consult the troubleshooting guide below:

### **NO PICTURE OR SOUND**

- Ensure the power button is on.
- Ensure the power outlet is operational.
- Ensure the power cord is not damaged.
- Ensure the power plug is connected firmly to the outlet.

### **PICTURE BUT NO SOUND**

- Ensure the audio is not set to mute.
- Ensure you have set the player's AUDIO settings correctly.

### **POOR PICTURE OR SOUND**

- Ensure you have set the player's AUDIO settings correctly
- Ensure the disc is not scratched or stained.

### **"BAD DISC" DISPLAYED**

- Ensure the disc is not warped, damaged or deformed.
- Ensure the disc is not badly stained or damaged.
- Ensure the disc format is compatible with the player.
- Please check whether you have tried to play a software CD. If so, please restart the player.

### **REMOTE NOT WORKING**

- Make sure the Main unit's POWER button is on
- Ensure the remote batteries are working.
- Point the remote control directly at the player's IR sensor.
- Remove any obstacles between the remote and the IR sensor.

### **UNIT NOT WORKING**

- Turn off the power, and then turn it on again.

### **"NO DISC" DISPLAYED**

- Ensure you have put the disc on the tray.
- Ensure the disc is not upside down.
- Ensure the disc is not distorted, stained or scratched.

